



The sturdy anodized legs of the Pro GT™tripod combine with a rugged 3-way pan head to deliver smooth, solid support for your optics.



- 2 -



Tripod Mount

Lock

Plate Lever

Bolt

BASIC ADJUSTMENTS Adjusting the Pan Head

The Pro GT features a 3-way pan head that allows you to quickly follow the action and easily adjust your viewing angle. For camera

- 4 -

use, this head allows you to choose between horizontal and vertical plate alignments.

Pan and Tilt Action

You can control all of the pan and tilt action with just one hand. To make any horizontal or vertical adjustments, twist the handle counter-clockwise to free the pan head's movement. When in desired position, twist handle clockwise to lock.



Control pan and tilt action with the handle.

Attaching Optics to the Tripod

- 1. Flip the plate lever lock outward to the *free* position and remove the quick-release plate.
- 2. Attach the plate to your optic or camera. Be sure to tighten the tripod mount bolt from the bottom side of the plate and flip the D ring so it lies flat.
- ring so it lies flat.

 3. Place the quick-release Flip the plate lever to lock/unlock plate. plate back into the plate

Quick-Release

Plate

holder. Flip the plate lever fully back to the *lock* position so the quick-release plate rests securely in the holder.

Caution

To prevent unnecessary damage to your optics, take a few seconds to remove your optic from the tripod before you move to a new location. Spotting scopes and other optics may become damaged if carried while attached to the tripod. The quick-release plate makes this easy—and quick!

TIP: Purchase additional quick-release plates for your optics so it is easy for you to switch equipment.

- 5 -



Adjusting the Tripod Legs

The Pro GT features sturdy anodized legs for reliable performance. The removable center column and adjustabel leg positions allows you to position the tripod close to the ground.

Center Column

Loosen the center column height adjustment knob to change the relative height of the tripod head. To help stabilize the tripod in windy conditions, hang a weight from the balance hook.

Leg Length

Each tripod leg extends to a maximum of three sections. To adjust the length of a leg section, flip the leg lever up to unlock. Slide the leg section out to the desired length and flip the leg lever back down to lock in place.

> Flip lever to lock/unlock.



Leg Lever

Lock

Adiustment

THE VIP WARRANTY

We build products based on our commitment to your absolute satisfaction. That's why Vortex tripods are unconditionally guaranteed and we make this Very Important Promise to you—a Very Important Person.

Rest assured that in the event your tripod becomes damaged or is defective, Vortex Optics will repair or replace it at no charge to you. If we cannot repair your tripod, we will replace it with a product in perfect working order and equal or better physical condition. Call Vortex Optics at 800-426-0048 for prompt, professional, and friendly service.

Vortex Optics 2120 West Greenview Drive Middleton, WI 53562 service@vortexoptics.com

Visit www.vortexoptics.com for more information. Canadian customers may visit www.vortexcanada.net for customer service information.

Note: The VIP Warranty does not cover loss, theft, deliberate damage, or cosmetic damage that does not hinder the performance of the product.

- 6 -- 7 -

VORTEX

THE FORCE OF OPTICS®

WWW.VORTEXOPTICS.COM